

A Survey of Current High-Performance Carbon Fiber Characterization Methods

by Steven P. Nguyen, Linda L. Ghiorse, and Thomas J. Mulkern

ARL-TR-2293 August 2000

Approved for public release; distribution is unlimited.

20000920 046

The findings in this report are not to be construed as an official Department of the Army position unless so designated by other authorized documents.

Citation of manufacturer's or trade names does not constitute an official endorsement or approval of the use thereof.

Destroy this report when it is no longer needed. Do not return it to the originator.

Army Research Laboratory

Aberdeen Proving Ground, MD 21005-5069

ARL-TR-2293

August 2000

A Survey of Current High-Performance Carbon Fiber Characterization Methods

Steven P. Nguyen, Linda L. Ghiorse, and Thomas J. Mulkern Weapons and Materials Research Directorate, ARL

Approved for public release; distribution is unlimited.

Abstract

This report reviews various test techniques published in the literature for evaluating carbon fiber via the single-filament tensile test, the dry bundle test, the resin-impregnated strand test, and the single-fiber fragmentation test (optical microscopy and acoustic emission). Experimental procedures, data analysis, and statistical tensile strength theory are also described. Each technique is followed by a discussion of the advantages and limitations. Furthermore, a materials property database has been developed that includes mechanical properties for several commercially available carbon fibers.

Acknowledgments

The authors would like to thank Dr. Steven H. McKnight and Seth R. Ghiorse of the U.S. Army Research Laboratory (ARL) for their review and technical comments on this report.

INTENTIONALLY LEFT BLANK.

Table of Contents

		Page
	Acknowledgments	iii
	List of Figures	vi
1.	Introduction	1
2.	Test Techniques	1
2.1	Single-Filament Tensile Test	1
2.1.1	Diameter Measurement	2 3 4
2.1.2	Statistical Tensile Strength	3
2.1.3	Strength of Fibers at Short Lengths	4
2.1.4	Discussion	4
2.2	Fiber Tow Test	5
2.2.1	Dry Bundle (Tow) Test	5
2.2.2	Resin-Impregnated Tow Test	6
2.2.3	Discussion	6
2.3	Single-Fiber Fragmentation Test	7
2.3.1	Optical Microscopy Data Acquisition	9
2.3.2	Acoustic Emission Data Acquisition	10
2.3.3	Discussion	10
3.	Conclusion	11
4.	References	13
	Appendix: High-Performance Carbon Fibers Database	15
	Distribution List	19
	Report Documentation Page	31

INTENTIONALLY LEFT BLANK.

List of Figures

<u>Figure</u>		Page
1.	Single-Fiber Mounting Tab.	2
2.	Schematic View of Laser Diffraction Diameter Measurement	3
3.	Mean Tensile Fiber Strength vs. Gage Length in Log Scale	5
4.	Logarithm of Cumulative Probability That a Fiber Fragment Is Greater or Equal to a Specified Length, $1n(P_s)$, vs. the Spacing of Fractures, L	8
A-1.	Data of Selected High-Performance Carbon Fibers in the Database	17
A-2.	A Typical Query Format for a Particular Carbon Fiber	18
A-3.	Sorted Results From the Query	18

INTENTIONALLY LEFT BLANK.

1. Introduction

This is part one of a two-part review of the physical properties of high-performance, Polyacrylicnitrile (PAN) based carbon fibers, and the techniques used in characterizing those properties. This report reviews the most common test methods used to determine the tensile properties and the statistical strength distribution of fibers—the single-filament tensile test, the tow test (dry bundle and resin-impregnated tow test), and the single-filament fragmentation test (optical microscopy and acoustic emission). This part of the study also contains the updated physical properties of the most popular PAN-based carbon fibers currently available on the market (see the Appendix). The second part of the study will discuss other characterization techniques used in determining the microstructures of the fibers and the relationship between these fine structures and the tensile properties of carbon fibers. The purpose of this review is to provide guidance for testing fibrous reinforcements. In addition, this report will serve as a resource for the properties of selected carbon fiber materials.

2. Test Techniques

2.1 Single-Filament Tensile Test. The first test used in determining tensile properties of carbon fibers is the single-filament tensile test. This test requires carefully extracting an individual carbon fiber from a tow, and great effort goes into aligning the test fiber axially. The test also calls for a significant number of samples for statistical analysis.

The following test procedure follows the ASTM Standard D3379 (American Society for Testing and Materials 1989). Individual fibers are randomly selected from a tow, and each fiber is carefully center-line mounted on a thin paper tab, as shown in Figure 1. Fibers are held in place by adhesive at the edges of slots in the tab. The slot length is the gage length of the test specimen, which is usually between 20 and 30 mm. The tab should be about three times longer than the specimen's gage length and half of the width of the gage length. In a tensile test device, the prepared specimen is then axially gripped at the tab ends. If the direct strain measurement of

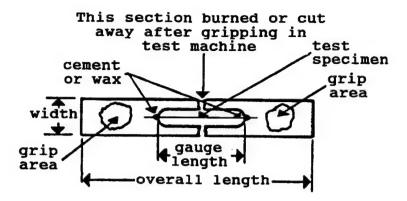


Figure 1. Single-Fiber Mounting Tab.

the specimen gage section is not possible, the compliance of the test device should be determined. The true compliance can then be calculated for determining Young's modulus.

2.1.1 Diameter Measurement. It is necessary to measure fiber diameter to calculate strength and modulus. Several methods are available, such as the optical microscope, the scanning electron microscope (SEM), and laser diffraction. Studies have shown that optical microscopic measurements tend to have a higher standard deviation than other methods (Chen and Diefendorf 1982). SEM methods can produce precise measurements of fiber diameter, but the procedure requires more sample preparation and image manipulation. This technique is also not practical for measuring the diameters of specimens to be tested. Fukuda et al. (1993) found that a laser diffraction method was most suitable for the 1×1 diameter measurements of the fibers to be tested. In this technique, fiber diameters are determined by measuring the distance between dark spots of the diffraction pattern, as in Figure 2.

The diameter, d, is calculated as follows:

$$d = \frac{2 L \lambda}{1}, \tag{1}$$

where L is the distance between the specimen and the screen, λ is the wavelength of the laser light, and l is the distance between dark spots.

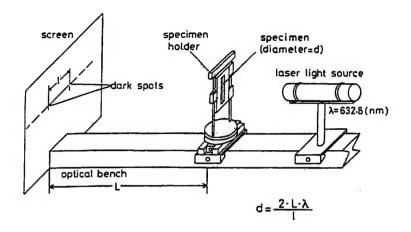


Figure 2. Schematic View of Laser Diffraction Diameter Measurement (Fukuda et al. 1993).

2.1.2 Statistical Tensile Strength. Unlike metals whose strengths are more deterministic, the strengths of brittle fibers are known to exhibit great variation between individual fibers, as well as along a fiber length. Hence, statistical models are most appropriate to describe strength distributions of fibers, and the best known model in composite strength theory has been the Weibull distribution (Chou 1992). The Weibull distribution of fiber strength, σ_f , has the following form:

$$P_{f}(\sigma_{f}) = 1 - \exp\left[-L(\sigma_{f}/\sigma_{0})^{\beta}\right], \tag{2}$$

where P_f is the cumulative probability of failure of a fiber of length L at a stress level $\geq \sigma_f$. The Weibull scale parameter is σ_0 , and β is the Weibull shape parameter reflecting the scattering of strength data. Based on experimental data, values of strength parameters σ_0 and β can be determined by various approaches (Manders and Chou 1983). One of these approaches is discussed in the next section. The mean fiber strength can then be calculated by the equation

$$\overline{\sigma} = \sigma_0 L^{-1/\beta} \Gamma (1 + 1/\beta), \tag{3}$$

where Γ denotes the gamma function.

2.1.3 Strength of Fibers at Short Lengths. The strengths of fibers also strongly depend on fiber lengths, as shown in equation 3. Often, knowing fiber strengths at very short lengths is crucial, especially in analyzing the fiber-matrix interfacial strength in composites. Testing very short fibers, however, is not feasible with the single-filament tensile test, due to problems with specimen gripping and alignment. Many attempts have been made to extrapolate strengths of short fibers from longer specimens with limited success. Most of these extrapolation methods rely on the assumption that Weibull parameters σ_0 and β are length independent. However, Asloun et al. (1989) found through their experimental data that Weilbull parameters varied with fiber length. Their study also showed that for extrapolating fiber strengths at short lengths, the most accurate and simple method was by means of the linear logarithmic dependence of strength on gage length. By taking the logarithm on both sides, equation 3 becomes

$$Ln\left(\overline{\sigma}_{f}\right) = \left(-1/\beta\right)\ln L + \ln\left[\sigma_{0}\Gamma\left(1 + 1/\beta\right)\right]. \tag{4}$$

The plot of mean fiber strengths vs. gage lengths in a logarithmic scale produces a straight line (Figure 3), which could be extended to estimate fiber strengths at short lengths. The slope of the line is the value of $(-1/\beta)$, and the value of σ_0 is derived from the y intercept. Mean fiber tensile strengths can simply be averaged from the experimental sample size of about 20. It can also be estimated if values of σ_0 and β are known. To achieve good extrapolation results, fiber tensile tests should be performed at many different gage lengths (at least seven), and there should be a sample size of about 20 for each gage length (Asloun et al. 1989). The validity of this method was confirmed in previously published data (Manders and Chou 1983; Goggin 1975; Barry 1978; Hitchon and Phillips 1979; Jones et al. 1980).

2.1.4 Discussion. Although the single-filament tensile test method can provide good tensile properties data and requires simple analysis, it has several disadvantages. The method is very tedious and labor intensive. A large sample size of about 20 is also required for a good statistical analysis. Because it is not always possible to directly measure fiber elongation, the compliance of tensile test devices should be determined. The experimental results could also be

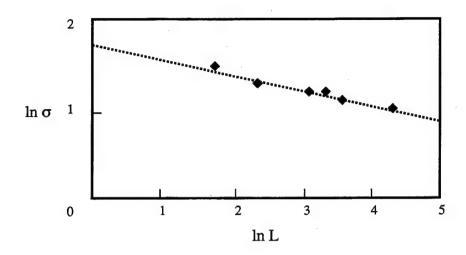


Figure 3. Mean Tensile Fiber Strength vs. Gage Length in Log Scale.

overestimated since only the strong fibers are extracted for tensile tests. Weak fibers break prior to testing and are discarded during sample preparation. In addition, a tensile test of very short fibers (<1 mm) is almost impossible. As a result, extrapolation techniques must be used, and they are usually unreliable. Another test method, the single-fiber fragmentation (discussed in section 2.3), may resolve many of these issues.

2.2 Fiber Tow Test.

2.2.1 Dry Bundle (Tow) Test. Because of the high degree of scattering in strengths of brittle carbon fibers, a large number of specimens are needed for good statistical analysis. With the fiber dry bundle test, this problem is minimized. Since the failure of each fiber bundle is the result of independent fractures of many fibers, there is much less data scattering for single fibers. Therefore, a smaller number of tests is required to achieve statistically valid data. Experimental data indicated that Weibull strength parameters determined from dry bundle tests are very similar to single-fiber tests (Manders and Chou 1983).

The following steps are typical experimental procedures. Fiber tows of different lengths (usually between 5 and 10 tows for each gage length) are cemented into grooved end tabs. There

should be no slack in any of the fibers. The cross-sectional area of the tow can be determined from the manufacturer's data of density and mass per unit length. All fibers are assumed to have the same diameter. The tows are then tested using a tensile test device. Tensile properties are determined from load and strain data similar to the procedure outlined in ASTM Standard D4018 (American Society of Testing and Materials 1993). The statistical analysis of a dry bundle test is similar to that discussed in section 2.1.3. The mean strengths of fiber tows (at different lengths) are plotted against corresponding lengths in logarithmic scale. The plot should approximate a straight line whose slope is $-1/\beta$. Calculated from the y-intercept is σ_0 . Mean fiber strengths can then be estimated from the determined Weibull parameters (equation 3).

2.2.2 Resin-Impregnated Tow Test. A more common and efficient method for determining tensile properties of carbon fiber is the resin-impregnated tow test. This technique is also better than the single-filament tensile method in the sense that fiber properties are measured in an environment more compatible to real composite parts. Experimental data shows that the fiber Young's moduli determined from the strand test method was closer to that obtained from composite data (Kowalski 1988).

The following procedure follows ASTM Standard D4018. Tows of carbon fibers are dipped into a compatible resin system and then worked over rollers or dies to squeeze out excess resin. The resin content should be between 35% and 60% by weight. The resin should also have greater strain-to-failure than the fibers so that it will not affect the evaluation of fiber-tensile properties. The main role of the resin is to provide enough support for specimen handling and a better, more uniform loading among fibers during the tensile test. A recommended system is a combination of bisphenol F epoxy and diethyltoluene diamine (3.9:1 by weight). Resin-impregnated strands are then cured under slight tension. If tabs are used, the distance between tabs should be 150 mm; otherwise, that would be the distance between the test grips. Tensile properties are calculated from load and strain data.

2.2.3 Discussion. Tow tests have several distinct advantages over single-filament tests. It is more practical to handle carbon fiber tows than single filaments, and similar experimental results

can be achieved in the case of the dry bundle test. In addition, due to less strength scattering in dry bundles, a smaller sample size is needed for testing. For the resin-impregnated tow test, the ease in specimen handling also makes direct strain measurements possible. Measured tensile properties are closer to those of composites, since fibers are surrounded by a polymer matrix. The trade-off is the deviation from the actual values of fiber-tensile properties. Thus, it is important to select a resin system that is compatible to the particular carbon fiber and greater in strain capability.

2.3 Single-Fiber Fragmentation Test. The single-fiber fragmentation test offers yet another technique for determining the strength of fibers, especially very short fibers, which has always been an obstacle in other methods. Similar to the resin-impregnated tow test, another advantage of the fiber fragmentation test is that it produces actual composite material data. The amount of data generated by the test is also much larger, making it more suitable for statistical analysis.

In a fragmentation test, a single fiber embedded in resin is strained, while the fiber repeatedly fractures into shorter and shorter fragments due to increasing stress. Because there are many fiber breaks in a single test, an abundance of data is produced in one fragmentation test. The fragmentation test is based on the following simple modification of equation 2:

$$P_s(1) = 1 - P_f(\sigma) = \exp\left[-L(\sigma_f/\sigma_0)^\beta\right], \tag{5}$$

where $P_s(l)$ is the survival cumulative probability of fibers at different specified lengths, l. Taking the logarithm of both sides,

$$\ln(P_s) = -L(\sigma_f/\sigma_0)^{\beta}. \tag{6}$$

Thus, by knowing the cumulative probability that the fiber fragments are greater than or equal to a specified length, the plot of $\ln(P_s)$ vs. L can be obtained. The plot should be linear, with a gradient equal to $-(\sigma_f/\sigma_0)^{\beta}$ (see Figure 4).

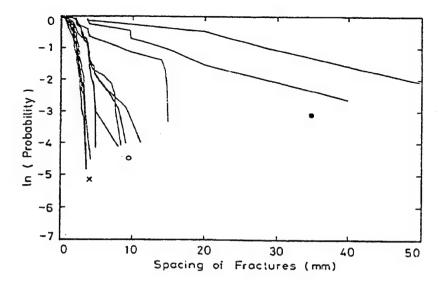


Figure 4. Logarithm of Cumulative Probability That a Fiber Fragment Is Greater or Equal to a Specified Length, $ln(P_s)$, vs. the Spacing of Fractures, L (Manders and Chou 1983).

These values of gradient are plotted against their corresponding levels of stress or strain (assuming linearly elastic fiber). The plot of $\ln(\text{gradient})$ vs. $\ln(\sigma_f)$ or $\ln(\epsilon_f)$ will then give the slope of value β and the y intercept of value σ_0 . Because the embedded fiber in the fragmentation test can fracture into very short segments, the values of β and σ_0 are the actual Weibull parameters of short fibers and are not obtained from extrapolation. Mean fiber strengths are calculated from these strength parameters according to equation 3.

Although there is no standardized procedure for the fragmentation test, various experimental procedures in the literature (Baillie and Bader 1994; Yavin et al. 1991; Gulino and Phoenix 1991; Waterbury and Drzal 1991; Waterbury 1990) follow these essential steps:

(a) A long fiber (longer than 50.8 mm) is carefully selected from a bundle and handled only by its ends. The fiber is then mounted on a silicon rubber mold. The mold is a standard ASTM 50.8-mm long dogbone cavity 3.175-mm wide × 1.587-mm thick × 25.4-mm long at the gage section. The mold cavity has sprue slots at each end to align and center the fiber axially. Once aligned, the fiber is held in place with fast curing epoxy in the sprue slots.

- (b) A resin system with greater strain-to-failure than the fiber (at least three times greater) is then either poured or pipetted into the mold cavity. Air bubbles in the resin can be avoided by degassing the mold and resin in a vacuum oven before filling the cavity.
- (c) The mold is placed in an oven and the resin is cured with the appropriate cure cycle; the specimen is then removed with great care to avoid damaging the embedded fiber.
- (d) The specimen is tested at small strain increments using a microstraining machine.

To determine the cumulative probability, P_s, of fiber fragments in the fragmentation test, the number of fragments and their lengths need to be measured and ranked at each strain level. Currently, there are two different techniques in this data acquisition—optical microscopy and acoustic emission.

2.3.1 Optical Microscopy Data Acquisition. For the optical microscopy technique, the number of fiber fragments and their lengths are measured at each strain level by a traveling microscope that moves along the fractured fiber. Measurements can also be done by mounting the microstraining device on the optical microscope during the translation stage. The optical resolution of the microscope should be powerful enough to identify the microfractures in the fiber. This procedure, however, can take hours to perform. In attempts to improve the speed of data acquisition, Waterbury and Drzal (1991) developed a technique with some automated features that could reduce the data acquisition time by an order of magnitude. Their system includes a computer-interfaced translation stage and a computer program that performs data processing. After each strain increment, the stage is translated at a constant rate while the fractured fiber is observed under the microscope. As fractures pass a set of cross hairs, the operator clicks the mouse and sends timing signals to the computer. The elapsed time between fractures is converted into fragment lengths by the software. Statistical analysis, fiber strength, and interfacial shear strength are also readily performed.

2.3.2 Acoustic Emission Data Acquisition. Despite many advantages over conventional methods, the optical microscopy technique has many shortcomings. First, the selected resin must be transparent so that the embedded fiber can be observed under the light microscope. Second, the strained fiber has to remain strained for a long time during the fragment length measurement. This step can induce creep in the specimen, as shown by Clough and McDonough (1996). Third, it is sometimes very difficult to identify the small gaps between fiber fragments, which are usually <1 μ m. The acoustic emission technique could potentially surmount these problems. In this technique, the fiber breaks are determined by detecting the burst of acoustic emission from each fracture. Some variations of this technique monitor acoustic source locations to determine the fragment lengths. Expensive equipment, however, is required. A simpler and more efficient technique was developed by Clough and McDonough of the National Institute of Standards and Technology. Based on the fragmentation theory (Gulino and Phoenix 1991), Clough and McDonough further simplified the analysis under the condition of low-applied fiber stress, σ_f , or applied strain, ε_f (which was measured here). The following equation is derived:

$$N \cong (\sigma_f/\alpha_0)^{\beta}, \tag{7}$$

where N is the number of detected fiber breaks. Thus, the only information needed is the number of breaks and the levels of applied stress or strain. Values of Weibull parameters can be determined from the plot of $\ln(N)$ vs. $\ln(\sigma_f)$ or $\ln(\epsilon_f)$.

To monitor break events, an acoustic emission transducer is attached to the gage section of the specimen. As the specimen is strained at a slow rate (approximately $5 \times 10^{-4} \text{ s}^{-1}$), the emission signals are amplified and recorded continuously by a computer. To avoid yielding, the applied strain should not exceed 2%. After a test, the entire signal recording is postprocessed with a median subtraction filter (Barnett 1989). This particular filter method greatly enhances the trigger signal and is able to filter out noise, but not emission events.

2.3.3 Discussion. The single-fiber fragmentation test is a better method for evaluating fiber strengths at short gage lengths. Experimental data is also more accurate because the

fragmentation test is an in-situ method. The fiber is fractured in a real composite environment. In a single test, a typical 25-mm fiber fractures about 50 times, which is equivalent to 50 single fiber tests (Waterbury and Drzal 1991). The fragmentation test, therefore, is able to generate a much larger amount of test data than other methods. Yet, the test time can be significantly reduced. In the acoustic emission technique by Clough and McDonough (1996), the amount of time required for each test is a minute or less.

Optical microscopy and acoustic emission techniques both produce close experimental results. The optically monitored method, however, requires more human interaction. In addition, the longer test time can cause creep in the specimens, generating error in the data. The acoustic emission technique overcomes the problems of visibility and creep since data is acoustically collected at the precise stress/strain level and not after each stress/strain increment, as in the optical technique (Clough and McDonough 1996). The equipment used for detecting acoustic emission, however, must be very sensitive and capable of filtering out background noise. Despite this, the technique could still be vulnerable to error due to simultaneous, multiple fiber fractures.

3. Conclusion

Each of the test techniques has its own unique advantages and limitations. No single technique is completely superior to others in all aspects. The dry bundle test is relatively better in determining average strengths of fiber and statistical parameters of longer fibers. For more accurate values of Young's modulus, however, the resin-impregnated strand test with an appropriate resin system is better. The single-fiber fragmentation technique is by far the best method for generating a large amount of data for statistical analysis, and it generates better accuracy of fiber strengths at very short lengths.

INTENTIONALLY LEFT BLANK.

4. References

- American Society for Testing and Materials. "Standard Test Method for Tensile Strength and Young's Modulus for High-Modulus Single-Filament Materials." ATSM Standard D3379, 1989.
- American Society for Testing and Materials. "Standard Test Methods for Properties of Continuous Filament Carbon and Graphite Fiber Tows." ATSM Standard D 4018-93, 1993.
- Asloun, E. M., J. B. Donnet, G. Guilpain, M. Nardin, and J. Schultz. "On the Estimation of the Tensile Strength of Carbon Fibres at Short Lengths." *J. Materials Science*, vol. 24, pp. 3504–3510, 1989.
- Baillie, C. A., and M. G. Bader. "Strength Studies of Single Carbon Fibres in Model Composite Fragmentation Tests." *Composites*, vol. 25, no. 6, p. 401, 1994.
- Barnett, J. "Statistical Analysis of Median Subtraction Filtering With Application to Point Target Identification in Infrared Background." *Infrared Systems and Component III*, pp. 10–18, SPIE 1050, 1989.
- Barry, P. W. Fibre Science and Technology. Vol. 11, p. 245, 1978.
- Chen, K. J., and R. J. Diefendorf. "Residual Stress in High Modulus Carbon Fibers." *Progress in Science and Engineering of Composites*, edited by T. Hayashi, K. Kawata, and S. Umekawa, ICCM-IV, Tokyo, 1982.
- Chou, T. W. Microstructural Design of Fiber Composites. Great Britain: Cambridge University Press, 1992.
- Clough, R. B., and W. G. McDonough. "The Measurement of Fiber Strength Parameters in Fragmentation Tests By Using Acoustic Emission." *Composites Science and Technology*, vol. 56, pp. 1119–1127, 1996.
- Fukuda, H., T. Miyazawa, and H. Tomatsu. "Strength Distribution of Monofilaments Used for Advanced Composites." *Composites Properties and Application*, ICCM/9, vol. 4, p. 687, 1993.
- Goggin, P. R. AERE Report R 7948. Oxfordshire, UK: Harwell, 1975.
- Gulino, R., and S. L. Phoenix. "Weibull Strength Statistics for Graphite Fibres Measured From the Break Progression in a Model Graphite/Glass/Epoxy Microcomposite." *J. Materials Science*, vol. 26, pp. 3107–3118, 1991.

- Hitchon, J. W., and D. C. Phillips. "Dependence of the Strength of Carbon Fibres on Length." Fibre Science and Technology, vol. 12, no. 3, pp. 217–233, May 1979.
- Jones, J. B., J. B. Barr, and R. E. Smith. "Analysis of Flaws in High-Strength Carbon Fibres From Mesophase Pitch." *Journal of Materials Science*, vol. 15, no. 10, pp. 2455–2465, October 1980.
- Kowalski, I. M. "Characterizing the Tensile Stress-Strain Nonlinearity of Polyacrylonitrile-Based Carbon Fibers." *Composite Materials: Testing and Design*, ASTM STP 972, p. 205, edited by J. D. Whitcomb, American Society for Testing and Materials, Philadelphia, 1988.
- Manders, P. W., and T. Chou. "Variability of Carbon and Glass Fibers and the Strength of Aligned Composites." J. Reinforced Plastics and Composites, vol. 2, p. 43, January 1983.
- Netravali, A. N., L. T. Topoleski, W. H. Sachse, and S. L. Phoenix. "An Acoustic Emission Technique for Measuring Fiber Fragment Length Distribution in the Single-Fiber Composite Test." *Comp. Sci. Technol.*, vol. 35, pp. 13–19, 1989.
- Sachse, W., A. N. Netravali, and A. R. Baker. "An Enhanced, Acoustic Emission-Based, Single-Fiber-Composite Test." *J. Nondestruc. Eval.*, vol. 11, pp. 251–261, 1990.
- Waterbury, M. C. FiberTrack, Single Fiber Fragmentation Data Acquisition and Analysis Computer Program, Copyright: M. C. Waterbury, 1990.
- Waterbury, M. C., and L. T. Drzal. "On the Determination of Fiber Strengths by In-Situ Fiber Strength Testing." J. Composites Technology and Research, vol. 13, no. 1, pp. 22–28, 1991.
- Weibull, W. "The Phenomenon of Rupture in Solids." Ingeniorsvetenskapsaka-demiens, Handlingar Nr. 153, pp. 1–45, 1939.
- Weibull, W. "A Statistical Theory of the Strength of Materials." Ingeniorsvetenskapsakademiens, Handlingar Nr. 151, 1939.
- Yavin, B., H. E. Ballis, J. Scherf, A. Eitan, and H. D. Wagner. "Continuous Monitoring of the Fragmentation Phenomenon in Single Fiber Composite Materials." *Polym. Comp.*, vol. 12, pp. 436–446, 1991.

Appendix:

High-Performance Carbon Fibers Database

INTENTIONALLY LEFT BLANK

As a part of this report, a database containing information on selected PAN-based carbon fibers was created using the database software MicroSoft Access. The software allows fast fiber selection by criteria on physical properties such as modulus, strength, density, fiber diameter, and CTE, as well as on manufacturers' information (Figure A-1). If a user wants to select particular fibers of modulus >350 GPa, a simple query can be entered, as shown in Figure A-2. The database then conveniently produces selections quickly (Figure A-3). Also included is updated price information on these high-performance fibers. The mechanical properties of the fibers are provided by the producers of the fibers, and the resin-impregnated strand test is typically used. This database is available from the Polymer Research Branch of the U.S. Army Research Laboratory-Weapons and Materials Research Directorate (ARL-WMRD), Aberdeen Proving Ground, MD.

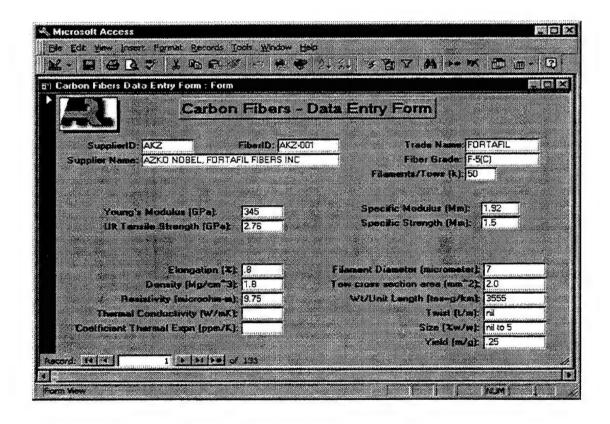


Figure A-1. Data of Selected High-Performance Carbon Fibers in the Database.

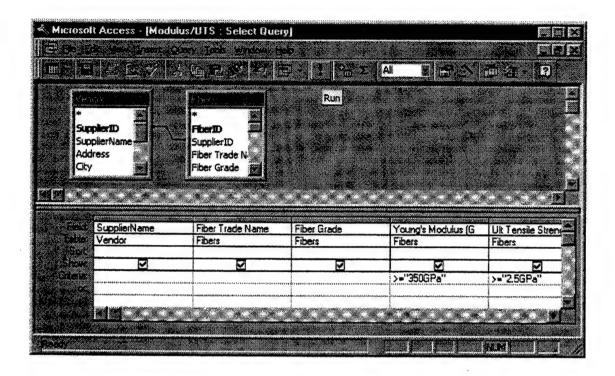


Figure A-2. A Typical Query Format for a Particular Carbon Fiber.

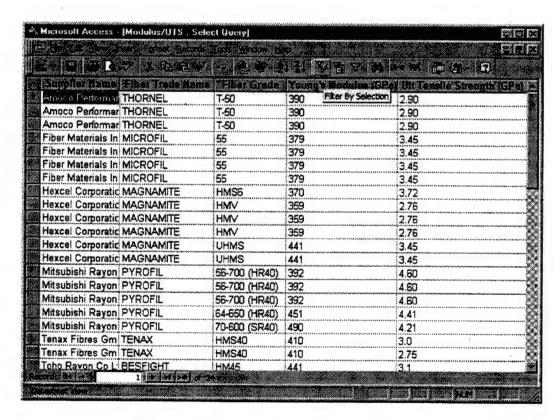


Figure A-3. Sorted Results From the Ouery.

NO. OF COPIES	ORGANIZATION .	NO. OF COPIES	ORGANIZATION
2	DEFENSE TECHNICAL INFORMATION CENTER DTIC DDA 8725 JOHN J KINGMAN RD STE 0944 FT BELVOIR VA 22060-6218	1	DIRECTOR US ARMY RESEARCH LAB AMSRL D D R SMITH 2800 POWDER MILL RD ADELPHI MD 20783-1197
1	HQDA DAMO FDT 400 ARMY PENTAGON WASHINGTON DC 20310-0460	1	DIRECTOR US ARMY RESEARCH LAB AMSRL DD 2800 POWDER MILL RD ADELPHI MD 20783-1197
1	OSD OUSD(A&T)/ODDDR&E(R) R J TREW THE PENTAGON WASHINGTON DC 20301-7100	. 1	DIRECTOR US ARMY RESEARCH LAB AMSRL CS AS (RECORDS MGMT) 2800 POWDER MILL RD ADELPHI MD 20783-1145
1	DPTY CG FOR RDA US ARMY MATERIEL CMD AMCRDA 5001 EISENHOWER AVE ALEXANDRIA VA 22333-0001	3	DIRECTOR US ARMY RESEARCH LAB AMSRL CI LL 2800 POWDER MILL RD ADELPHI MD 20783-1145
1	INST FOR ADVNCD TCHNLGY THE UNIV OF TEXAS AT AUSTIN PO BOX 202797 AUSTIN TX 78720-2797		ABERDEEN PROVING GROUND
1	DARPA B KASPAR 3701 N FAIRFAX DR ARLINGTON VA 22203-1714	4	DIR USARL AMSRL CI LP (BLDG 305)
1	NAVAL SURFACE WARFARE CTR CODE B07 J PENNELLA 17320 DAHLGREN RD BLDG 1470 RM 1101 DAHLGREN VA 22448-5100		
1	US MILITARY ACADEMY MATH SCI CTR OF EXCELLENCE DEPT OF MATHEMATICAL SCI MADN MATH THAYER HALL WEST POINT NY 10996-1786		

- 1 DIRECTOR
 USARL
 AMSRL CP CA
 D SNIDER
 2800 POWDER MILL RD
 ADELPHI MD 20783
- 1 COMMANDER
 US ARMY ARDEC
 AMSTA AR FSE
 T GORA
 PICATINNY ARSENAL NJ
 07806-5000
- 3 COMMANDER
 US ARMY ARDEC
 AMSTA AR TD
 R PRICE
 V LINDNER
 C SPINELLI
 PICATINNY ARSENAL NJ
 07806-5000
- 5 US ARMY TACOM
 AMSTA JSK
 S GOODMAN
 J FLORENCE
 AMSTA TR D
 B RAJU
 L HINOJOSA
 D OSTBERG
 WARREN MI 48397-5000
- 1 COMMANDER
 US ARMY ARDEC
 SFAE FAS PM
 F MCLAUGHLIN
 PICATINNY ARSENAL NJ
 07806-5000
- 5 PM SADARM
 SFAE GCSS SD
 COL B ELLIS
 M DEVINE
 W DEMASSI
 J PRITCHARD
 S HROWNAK
 PICATINNY ARSENAL NJ
 07806-5000

NO. OF <u>COPIES</u> <u>ORGANIZATION</u>

- 5 COMMANDER
 US ARMY ARDEC
 AMSTA AR CCH
 S MUSALLI
 R CARR
 M LUCIANO
 T LOUCEIRO
 PICATINNY ARSENAL NJ
 07806-5000
- 4 COMMANDER
 US ARMY ARDEC
 AMSTA AR (2 CPS)
 E FENNEL (2 CPS)
 PICATINNY ARSENAL NJ
 07806-5000
- 1 COMMANDER
 US ARMY ARDEC
 AMSTA AR CCH P
 J LUTZ
 PICATINNY ARSENAL NJ
 07806-5000
- 1 COMMANDER
 US ARMY ARDEC
 AMSTA AR FSF T
 C LIVECCHIA
 PICATINNY ARSENAL NJ
 07806-5000
- 1 COMMANDER
 US ARMY ARDEC
 AMSTA AR QAC T C
 C PATEL
 PICATINNY ARSENAL NJ
 07806-5000
- 2 COMMANDER
 US ARMY ARDEC
 AMSTA AR M
 D DEMELLA
 F DIORIO
 PICATINNY ARSENAL NJ
 07806-5000

- 3 COMMANDER
 US ARMY ARDEC
 AMSTA AR FSA
 A WARNASH
 B MACHAK
 M CHIEFA
 PICATINNY ARSENAL NJ
 07806-5000
- 1 COMMANDER
 SMCWV QAE Q
 B VANINA
 BLDG 44 WATERVLIET ARSENAL
 WATERVLIET NY 12189-4050
- 1 COMMANDER
 WATERVLIET ARSENAL
 SMCWV SPM
 T MCCLOSKEY
 BLDG 253
 WATERVLIET NY 12189-4050
- 8 DIRECTOR
 BENET LABORATORIES
 AMSTA AR CCB
 J KEANE
 J BATTAGLIA
 J VASILAKIS
 G FFIAR
 V MONTVORI
 G DANDREA
 R HASENBEIN
 SMCAR CCB R
 S SOPOK
 WATERVLIET NY 12189
- 1 COMMANDER
 WATERVLIET ARSENAL
 SMCWV QA QS
 K INSCO
 WATERVLIET NY 12189-4050
- 1 COMMANDER
 US ARMY ARDEC
 PRDCTN BASE MODERN ACTY
 AMSMC PBM K
 PICATINNY ARSENAL NJ
 07806-5000
- 1 COMMANDER
 US ARMY BELVOIR RD&E CTR
 STRBE JBC
 FT BELVOIR VA 22060-5606

NO. OF COPIES ORGANIZATION

- 2 COMMANDER
 US ARMY ARDEC
 AMSTA AR FSB G
 M SCHIKSNIS
 D CARLUCCI
 PICATINNY ARSENAL NJ
 07806-5000
- 1 US ARMY COLD REGIONS RESEARCH & ENGINEERING LABORATORY P DUTTA 72 LYME RD HANOVER NH 03755
- 1 DIRECTOR
 USARL
 AMSRL WT L
 D WOODBURY
 2800 POWDER MILL RD
 ADELPHI MD 20783-1145
- 2 COMMANDER
 US ARMY AMCOM
 AMSMI RD
 W MCCORKLE
 AMSMI RD ST
 P DOYLE
 AMSMI RD ST CN
 T VANDIVER
 REDSTONE ARSENAL AL 35898-5247
- 6 US ARMY RESEARCH OFFICE
 A CROWSON
 J CHANDRA
 J PRATER
 R SINGLETON
 G ANDERSON
 K IYER
 PO BOX 12211
 RESEARCH TRIANGLE PARK NC
 27709-2211
- 5 PROJECT MANAGER
 TANK MAIN ARMAMENT SYSTEMS
 SFAE GSSC TMA
 COL PAWLICKI
 K KIMKER
 E KOPACZ
 R ROESER
 B DORCY
 PICATINNY ARSENAL NJ
 07806-5000

NO. OF NO. OF **COPIES ORGANIZATION COPIES ORGANIZATION** PM TMAS 1 NAVAL SURFACE WARFARE CTR SFAE GSSC TMA SMD CRANE DIVISION R KOWALSKI M JOHNSON CODE 20H4 PICATINNY ARSENAL NJ LOUISVILLE KY 40214-5245 07806-5000 1 DAVID TAYLOR RSRCH CTR 3 PEO FIELD ARTILLERY SYSTEMS SHIP STRUCTURES & PROT DEPT J CORRADO CODE 1702 SFAE FAS PM **H GOLDMAN** BETHESDA MD 20084 T MCWILLIAMS T LINDSAY DAVID TAYLOR RSRCH CTR PICATINNY ARSENAL NJ R ROCKWELL 07806-5000 W PHYILLAIER BETHESDA MD 20054-5000 1 PM CRUSADER **G DELCOCO DEFENSE NUCLEAR AGCY** 1 INNOVATIVE CONCEPTS DIV J SHIELDS PICATINNY ARSENAL NJ R ROHR 07806-5000 6801 TELEGRAPH RD ALEXANDRIA VA 22310-3398 2 NASA LANGLEY RESEARCH CTR MS 266 **EXPEDITIONARY WARFARE DIV N85** AMSRL VS F SHOUP W ELBER 2000 NAVY PENTAGON F BARTLETT JR WASHINGTON DC 20350-2000 HAMPTON VA 23681-0001 1 OFC OF NAVAL RSRCH 2 COMMANDER D SIEGEL 351 DARPA 800 N OUINCY ST **ARLINGTON VA 22217-5660** J KELLY **B WILCOX** 3701 N FAIRFAX DR NAVAL SURFACE WARFARE CTR **ARLINGTON VA 22203-1714** R HUBBARD G33 C DAHLGREN DIVISION COMMANDER DAHLGREN VA WRIGHT PATTERSON AFB WL FIV NAVAL SURFACE WARFARE CTR A MAYER J H FRANCIS CODE G30 WL MLBM D WILSON CODE G32 S DONALDSON R D COOPER CODE G32 T BENSON-TOLLE E ROWE CODE G32 C BROWNING J FRAYSSE CODE G33 J MCCOY T DURAN CODE G33 **F ABRAMS** L DE SIMONE CODE G33 2941 P ST STE 1 DAHLGREN VA 22448 DAYTON OH 45433 COMMANDER 1 OFFICE OF NAVAL RESEARCH NAVAL SEA SYSTEMS CMD MECH DIV CODE 1132SM **DLIESE**

2531 JEFFERSON DAVIS HIGHWAY

ARLINGTON VA 22242-5160

Y RAJAPAKSE

ARLINGTON VA 22217

- 1 NAVAL SURFACE WARFARE CTR M E LACY CODE B02 17320 DAHLGREN RD DAHLGREN VA 22448
- 1 NAVAL SURFACE WARFARE CTR TECH LIBRARY CODE 323 17320 DAHLGREN RD DAHLGREN VA 22448
- 4 DIRECTOR
 LAWRENCE LIVERMORE NATL LAB
 R CHRISTENSEN
 S DETERESA
 F MAGNESS
 M FINGER
 PO BOX 808
 LIVERMORE CA 94550
- 2 DIRECTOR LLNL
 F ADDESSIO MS B216
 J REPPA MS F668
 PO BOX 1633
 LOS ALAMOS NM 87545
- 1 PENNSYLVANIA STATE UNIVERSITY C BAKIS 227 N HAMMOND UNIVERSITY PARK PA 16802
- 3 UNITED DEFENSE LP 4800 EAST RIVER RD P JANKE MS 170 T GIOVANETTI MS 236 B VAN WYK MS 389 MINNEAPOLIS MN 55421-1498
- 1 OAK RIDGE NATL LAB R M DAVIS PO BOX 2008 OAK RIDGE TN 37831-6195
- 4 DIRECTOR
 SANDIA NATL LABORATORIES
 APPLIED MECHANICS DEPT
 DIV 8241
 W KAWAHARA
 K PERANO
 D DAWSON
 P NIELAN
 PO BOX 969
 LIVERMORE CA 94550-0096

NO. OF COPIES ORGANIZATION

- 1 DREXEL UNIVERSITY
 A S D WANG
 32ND AND CHESTNUT ST
 PHILADELPHIA PA 19104
- 1 BATTELLE C R HARGREAVES 505 KING AVE COLUMBUS OH 43201-2681
- 1 PACIFIC NORTHWEST LAB M SMITH PO BOX 999 RICHLAND WA 99352
- 1 LAWRENCE LIVERMORE NATL LAB M MURPHY PO BOX 808 L 282 LIVERMORE CA 94550
- 2 U OF DAYTON RSRCH INST R Y KIM A K ROY 300 COLLEGE PARK AVE DAYTON OH 45469-0168
- 2 UNIVERSITY OF DELAWARE
 CTR FOR COMPOSITE MATERIALS
 J GILLESPIE
 M SANTARE
 201 SPENCER LABORATORY
 NEWARK DE 19716
- 2 UNIV OF TEXAS AT AUSTIN
 CTR FOR ELECTROMECHANICS
 A WALLS
 J KITZMILLER
 10100 BURNET RD
 AUSTIN TX 78758-4497
- 1 AAI CORPORATION T G STASTNY PO BOX 126 HUNT VALLEY MD 21030-0126
- 1 J HEBERT PO BOX 1072 HUNT VALLEY MD 21030-0126

NO. OF NO. OF COPIES ORGANIZATION **COPIES ORGANIZATION** ARMTEC DEFENSE PRODUCTS **BRUNSWICK DEFENSE** S DYER T HARRIS 85 901 AVE 53 STE 410 PO BOX 848 1745 JEFFERSON DAVIS HWY COACHELLA CA 92236 **ARLINGTON VA 22202** ADVANCED COMPOSITE 1 PROJECTILE TECHNOLOGY INC MATERIALS CORPORATION 515 GILES ST P HOOD HAVRE DE GRACE MD 21078 J RHODES 1525 S BUNCOMBE RD **CUSTOM ANALYTICAL ENGR** GREER SC 29651-9208 SYS INC A ALEXANDER 1 SAIC 13000 TENSOR LANE NE D DAKIN FLINTSTONE MD 21530 2200 POWELL ST STE 1090 EMERYVILLE CA 94608 1 **NOESIS INC** A BOUTZ 1 SAIC 1110 N GLEBE RD STE 250 M PALMER **ARLINGTON VA 22201-4795** 2109 AIR PARK RD S E ALBUQUERQUE NM 87106 1 ARROW TECH ASSO 1233 SHELBURNE RD STE D 8 1 SAIC SOUTH BURLINGTON VT 05403-7700 R ACEBAL 1225 JOHNSON FERRY RD STE 100 5 GEN CORP AEROJET MARIETTA GA 30068 D PILLASCH T COULTER **SAIC** C FLYNN **G CHRYSSOMALLIS** D RUBAREZUL 3800 W 80TH ST STE 1090 M GREINER **BLOOMINGTON MN 55431** 1100 WEST HOLLYVALE ST AZUSA CA 91702-0296 ALLIANT TECH SYSTEMS INC C CANDLAND 7 CIVIL ENGR RSCH FOUNDATION R BECKER H BERNSTEIN PRESIDENT L LEE C MAGNELL C AACHUS K ALMOND D KAMDAR R BELLE D FISHER **M WILLETT** 600 2ND ST NE E DELO HOPKINS MN 55343-8367 **B MATTES** 1015 15TH ST NW STE 600 1 AMOCO PERFORM PRODUCTS INC. WASHINGTON DC 20005 M MICHNO JR 4500 MCGINNIS FERRY RD NATL INST OF STAND & TECHLGY ALPHARETTA GA 30202-3944 STRUCTURE & MECHANICS GRP POLYMER DIV POLYMERS RM A209

G MCKENNA

GAITHERSBURG MD 20899

1

APPLIED COMPOSITES

333 NORTH SIXTH ST ST CHARLES IL 60174

W GRISCH

NO. OF NO. OF **COPIES ORGANIZATION** COPIES ORGANIZATION PM ADVANCED CONCEPTS GENERAL DYNAMICS LORAL VOUGHT SYSTEMS LAND SYSTEMS DIV JTAYLOR MS WT 21 **D BARTLE** PO BOX 650003 PO BOX 1901 DALLAS TX 76265-0003 WARREN MI 48090 LORAL VOUGHT SYSTEMS 3 HERCULES INC 2 R BOE G JACKSON K COOK F POLICELLI 1701 W MARSHALL DR J POESCH **GRAND PRAIRIE TX 75051** PO BOX 98 **MAGNA UT 84044 BRIGS CO** 1 J BACKOFEN HERCULES INC 3 2668 PETERBOROUGH ST **G KUEBELER** HERDON VA 22071-2443 J VERMEYCHUK B MANDERVILLE JR SOUTHWEST RSRCH INST 1 HERCULES PLAZA **ENGR & MTRL SCIENCES DIV WILMINGTON DE 19894** J RIEGEL 6220 CULEBRA RD 1 HEXCEL M SHELENDICH PO DRAWER 28510 11555 DUBLIN BLVD SAN ANTONIO TX 78228-0510 PO BOX 2312 ZERNOW TECHNICAL SERVICES 1 **DUBLIN CA 94568-0705** L ZERNOW INST FOR ADVANCED TECH 425 W BONITA AVE SUITE 208 5 SAN DIMAS CA 91773 T KIEHNE **HFAIR** R EICHELBERGER P SULLIVAN **409 W CATHERINE ST** W REINECKE BEL AIR MD 21014-3613 I MCNAB 4030 2 W BRAKER LN DYNA EAST CORPORATION 1 **AUSTIN TX 78759** P C CHOU 1 INTEGRATED COMPOSITE TECH **3201 ARCH ST** PHILADELPHIA PA 19104-2711 H PERKINSON JR PO BOX 397 MARTIN MARIETTA CORP YORK NEW SALEM PA 17371-0397 P DEWAR L SPONAR INTERFEROMETRICS INC 230 EAST GODDARD BLVD R LARRIVA VICE PRESIDENT KING OF PRUSSIA PA 19406 8150 LEESBURG PIKE VIENNA VA 22100 **OLIN CORPORATION** 1 AEROSPACE RES & DEV FLINCHBAUGH DIV E STEINER (ASRDD) CORP D ELDER **B STEWART** PO BOX 49472 PO BOX 127 COLORADO SPRINGS CO 80949-9472 RED LION PA 17356

- 1 OLIN CORPORATION L WHITMORE 10101 9TH ST NORTH ST PETERSBURG FL 33702
- 1 SPARTA INC J GLATZ 9455 TOWNE CTR DRIVE SAN DIEGO CA 92121-1964
- 1 UNITED DEFENSE LP
 P PARA
 G THOMAS
 1107 COLEMAN AVE BOX 367
 SAN JOSE CA 95103
- 1 MARINE CORPS SYST CMD PM GROUND WPNS COL R OWEN 2083 BARNETT AVE SUITE 315 QUANTICO VA 22134-5000
- 1 OFC OF NAVAL RES J KELLY 800 NORTH QUINCEY ST ARLINGTON VA 22217-5000
- 2 NAVAL SURFC WARFARE CTR CARDEROCK DIV R CRANE CODE 2802 C WILLIAMS CODE 6553 3A LEGGETT CIR ANNAPOLIS MD 21402
- 5 SIKORSKY
 H BUTTS
 T CARSTENSAN
 B KAY
 S GARBO
 J ADELMANN
 6900 MAIN ST
 PO BOX 9729
 STRATFORD CT 06601-1381
- 1 AMOCO POLYMERS J BANISAUKAS 4500 MCGINNIS FERRY RD ALPHARETTA GA 30005
- 1 HEXCEL T BITZER 11711 DUBLIN BLVD DUBLIN CA 94568

NO. OF COPIES ORGANIZATION

- 1 BOEING R BOHLMANN PO BOX 516 MC 5021322 ST LOUIS MO 63166-0516
- 1 NAVSEA OJRI
 G CAMPONESCHI
 2351 JEFFERSON DAVIS HWY
 ARLINGTON VA 22242-5160
- 1 LOCKHEED MARTIN R FIELDS 1195 IRWIN CT WINTER SPRINGS FL 32708
- 1 USAF
 WL MLS OL A HAKIM
 5225 BAILEY LOOP 243E
 MCCLELLAN AFB CA 55552
- 1 PRATT & WHITNEY D HAMBRICK 400 MAIN ST MS 114-37 EAST HARTFORD CT 06108
- 1 BOEING
 DOUGLAS PRODUCTS DIV
 L J HART-SMITH
 3855 LAKEWOOD BLVD
 D800-0019
 LONG BEACH CA 90846-0001
- 1 MIT
 P LAGACE
 77 MASS AVE
 CAMBRIDGE MA 01887
- 1 NASA-LANGLEY
 J MASTERS MS 389
 HAMPTON VA 23662-5225
- 2 CYTEC FIBERITE
 M LIN
 W WEB
 1440 N KRAEMER BLVD
 ANAHEIM CA 92806
- 2 BOEING ROTORCRAFT
 P MINGURT
 P HANDEL
 800 B PUTNAM BLVD
 WALLINGFORD PA 19086

- 2 FAA TECH CENTER
 D OPLINGER AAR 431
 P SHYPRYKEVICK AAR 431
 ATLANTIC CITY NJ 08405
- 1 NASA LANGLEY RC CC POE MS 188E NEWPORT NEWS VA 23608
- 1 LOCKHEED MARTIN S REEVE 8650 COBB DR D73 62 MZ 0648 MARIETTA GA 30063-0648
- WL MLBC
 E SHINN
 2941 PST STE 1
 WRIGHT PAT AFB OH 45433-7750
- 1 IIT RESEARCH CENTER D ROSE 201 MILL ST ROME NY 13440-6916
- 1 MATERIALS SCIENCES CORP B W ROSEN 500 OFFICE CENTER DR STE 250 FORT WASHINGTON PA 19034
- 1 DOW UT S TIDRICK 15 STERLING DR WALLINGFORD CT 06492
- 4 NIST
 POLYMERS DIVISION
 R PARNAS
 J DUNKERS
 M VANLANDINGHAM
 D HUNSTON
 GAITHERSBURG MD 20899
- 2 NORTHROP GRUMMAN ENVIRONMENTAL PROGRAMS R OSTERMAN 8900 E WASHINGTON BLVD PICO RIVERA CA 90660

NO. OF COPIES ORGANIZATION

- OAK RIDGE NATL LAB
 A WERESZCZAK
 BLDG 4515 MS 6069
 PO BOX 2008
 OAKRIDGE TN 37831-6064
- 1 COMMANDER
 USARDEC
 INDUSTRIAL ECOLOGY CTR
 T SACHAR
 BLDG 172
 PICATINNY ARSENAL NJ
 07806-5000
- 1 COMMANDER
 AVIATION APPLIED TECH DIR
 PLATFORMS TECH DIV AIRFRAMES
 USA AMCOM, AMSAM-AR-T-TBD
 J SCHUCK
 LEE BLVD BLDG 401
 FT EUSTIS VA 23604-5577
- 1 COMMANDER
 USA ARDEC
 AMSTA AR SRE
 D YEE
 PICATINNY ARSENAL NJ
 07806-5000
- 7 CDR USA ARDEC
 AMSTA AR CCH B
 B KONRAD
 E RIVERA
 G EUSTICE
 S PATEL
 G WAGNECZ
 R SAYER
 F CHANG
 BLDG 65
 PICATINNY ARSENAL NJ
 07806-5000
- 1 CDR US ARMY ARDEC AMSTA AR QAC T D RIGOGLIOSO BLDG 354 M829E3 IPT PICATINNY ARSENAL NJ 07806-5000

- 1 DIR US ARMY AVMCOM COMANCHE PRGM MGR OFC SFAE AV RAM TV D CALDWELL BLDG 5300 REDSTONE ARSENAL AL 35898
- 2 BOEING DEFNS & SPACE GRP W HAMMOND J RUSSELL MS 4X55 PO BOX 3707 SEATTLE WA 98124-2207
- 1 BALLISTIC MISSILE DEF ORG 1725 JEFFERSON DAVIS HIGHWAY SUITE 809 MAJ J SHOEMAKER ARLINGTON VA 22202
- 1 CRYSTAL SQUARE (5TH FLOOR)
 BALLISTIC MISSILE DEFENSE ORG
 DR J STUBSTAD
 1725 JEFFERSON DAVIS HIGHWAY
 SUITE 809
 ARLINGTON VA 22202
- 1 SHAFER CORPORATION 1901 NORTH FORT MYER DRIVE DR C BYVIK SUITE 800 ARLINGTON VA 22209
- 1 USA SSDC/WEAPONS DIRECTORATE CSSD-WD-C R BROWN PO BOX 1500 HUNTSVILLE, AL 35807-3502
- 2 FIBER MATERIALS INC B BURNS P MARTIN 5 MORIN STREET BIDDEFORD ME 04005
- 1 VANGUARD COMPOSITE GROUP INC G WONACOTT 5550 OBERLIN DR SUITE B SAN DIEGO CA 92121

NO. OF COPIES ORGANIZATION

- 1 SPARTA INC J ZUIEBACK 10540 HEATER COURT SAN DIEGO CA 92121
- 1 MENTIS SCIENCES INC J DIGNAM 150 DOW STREET TOWER TWO MANCHESTER NH 03101
- 3 INSTITUTE FOR DEFENSE ANALYSIS M RIGDON J PERESH T WHITNEY 1801 N BEAUREGARD ST ALEXANDRIA VA 22311
- 1 AF PHILLIPS LAB/VTS A DAS 3550 ABERDEEN AVE KIRKLAND AFB NM 87117
- 1 JET PROPULSION LAB R LIANG 4800 OAK GROVE DRIVE PASADENA CA 91109
- 1 DR TECHNOLOGIES
 L DUNBAR
 11585 SORRENTO VALLEY ROAD
 SUITE 103
 SAN DIEGO CA 92121

ABERDEEN PROVING GROUND

56 DIR USARL AMSRL CI AMSRL CI HA W STUREK AMSRL IS CD R KASTE AMSRL SL B AMSRL SL BA AMSRL SL BE D BELY AMSRL SL I AMSRL WM B A HORST E SCHMIDT AMSRL WM BE G WREN **CLEVERITT** D KOOKER

ABERDEEN PROVING GROUND CONT.

AMSRL WM BC

P PLOSTINS

DLYON

J NEWILL

S WILKERSON

AMSRL WM BD

R FIFER

B FORCH

R PESCE RODRIGUEZ

B RICE

AMSRL WM M

D VIECHNICKI

G HAGNAUER

J MCCAULEY

W LEONARD

AMSRL WM MA

R SHUFORD

L GHIORSE

S NGUYEN

S MCKNIGHT

T MULKERN

P MOY

AMSRL WM MB

B FINK

S GHIORSE

D GRANVILLE

W DRYSDALE

C HOPPEL

D SPAGNUOLO

J TZENG

AMSRL WM MC

J BEATTY

AMSRL WM MD

W DE ROSSET

W ROY

AMSRL WM T

B BURNS

AMSRL WM TA

W BRUCHEY

W GILLICH

E RAPACKI

T HAVEL

AMSRL WM TC

R COATES

AMSRL WM TD

D DIETRICH

A DAS GUPTA

AMSRL WM BA

F BRANDON

W D AMICO

NO. OF COPIES ORGANIZATION

AMSRL WM BR
J BORNSTEIN
AMSRL WM TE
A NIILER
AMSRL WM BF
J LACETERA

INTENTIONALLY LEFT BLANK.

Form Approved REPORT DOCUMENTATION PAGE OMB No. 0704-0188 Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data so gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding the burden estimate or any other aspect of the collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA. 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project(0704-0188), Washington, DC 20503. ork Reduction Project(0704-0188), Washington, DC 20503 3. REPORT TYPE AND DATES COVERED 2. REPORT DATE 1. AGENCY USE ONLY (Leave blank) Final, January 1999 - July 1999 August 2000 5. FUNDING NUMBERS 4. TITLE AND SUBTITLE A Survey of Current High-Performance Carbon Fiber Characterization Methods 622105.AH84 6. AUTHOR(S) Steven P. Nguyen, Linda L. Ghiorse, Thomas J. Mulkern 7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) 8. PERFORMING ORGANIZATION REPORT NUMBER U.S. Army Research Laboratory ARL-TR-2293 ATTN: AMSRL-WM-MA Aberdeen Proving Ground, MD 21005-5069 10 SPONSORING/MONITORING 9. SPONSORING/MONITORING AGENCY NAMES(S) AND ADDRESS(ES) AGENCY REPORT NUMBER 11. SUPPLEMENTARY NOTES 12b. DISTRIBUTION CODE 12a. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release; distribution is unlimited. 13. ABSTRACT (Maximum 200 words) This report reviews various test techniques published in the literature for evaluating carbon fiber via the single-filament tensile test, the dry bundle test, the resin-impregnated strand test, and the single-fiber fragmentation test (optical microscopy and acoustic emission). Experimental procedures, data analysis, and statistical tensile strength theory are also described. Each technique is followed by a discussion of the advantages and limitations. Furthermore, a materials property database has been developed that includes mechanical properties for several commercially available carbon fibers. 15. NUMBER OF PAGES 14. SUBJECT TERMS mechanical properties, carbon fiber 16. PRICE CODE 20. LIMITATION OF ABSTRACT 19. SECURITY CLASSIFICATION 17. SECURITY CLASSIFICATION 18. SECURITY CLASSIFICATION OF THIS PAGE OF ABSTRACT OF REPORT

UL

UNCLASSIFIED

UNCLASSIFIED

UNCLASSIFIED

INTENTIONALLY LEFT BLANK.

USER EVALUATION SHEET/CHANGE OF ADDRESS

This Laboratory under the items/questions be	ertakes a continuing effort to improve the slow will aid us in our efforts.	quality of the reports it publishes.	Your comments/answers to
1. ARL Report Num	ber/Author ARL-TR-2293 (Nguyen) Date of Repor	rt August 2000
2. Date Report Recei	ved		
	tisfy a need? (Comment on purpose, rela		
-	is the report being used? (Information se		
avoided, or efficiencie	on in this report led to any quantitative es achieved, etc? If so, please elaborate.		
	s. What do you think should be changed mat, etc.)		
	Organization		
CURRENT	Name	E-mail Name	
ADDRESS	Street or P.O. Box No.		
	City, State, Zip Code		
7. If indicating a Cha or Incorrect address b	inge of Address or Address Correction, polow.	lease provide the Current or Correct	t address above and the Old
	Organization		
OLD	Name		
ADDRESS	Street or P.O. Box No.		
	City, State, Zip Code		
		dicated, tape closed, and mail.)	

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO 0001, APG, MD

POSTAGE WILL BE PAID BY ADDRESSEE

DIRECTOR
US ARMY RESEARCH LABORATORY
ATTN AMSRL WM MA
ABERDEEN PROVING GROUND MD 21005-5069

NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES